

PHILIPS EDITION

MENTORED BY  UBISOFT



HEDDOKO

WHAT YOU NEED TO KNOW TO GET STARTED

Hi – meet your new Heddoko suit. Let us help you get started.



**PLEASE FOLLOW THESE INSTRUCTIONS
TO HELP YOU GET THE MOST OUT OF
YOUR SUIT.**

For any technical problems, please
contact support@heddoko.com.

This quick start guide will show you how to get your suit up and running – from setting it up and putting it on for the first time, to taking good care of it and recording movement data.

You are one of the first people to have early access to the suit – we are constantly seeking to improve its performance so we can help you improve yours. Please do not hesitate to give us feedback.


INDEX

| | |
|--------------------------------------------|-----------|
| INITIAL SET-UP | 4 |
| What's in the box | 4 |
| Charging your suit | 5 |
| WEARING THE SUIT | 6 |
| Putting on your compression shirt | 6 |
| Putting on your compression pants | 7 |
| Motion tracker : placement overview | 8 |
| Inserting your Biomech Capsules | 9 |
| Attaching the battery pack | 10 |
| Turning on and connecting the battery pack | 12 |
| Troubleshooting: connecting | 13 |
| Battery pack features | 14 |
| Usage overview | 15 |
| Troubleshooting: Sleep mode | 17 |
| Shut-off | 18 |
| Troubleshooting: Shut-off | 19 |
| Removing the SD card | 20 |
| Removing your suit | 21 |
| CARE & WASHING INSTRUCTIONS | 18 |



WHAT'S IN THE BOX

Your Heddoko Development Kit includes: (A) 1 Quick Start Guide, (B) 1 Heddoko Compression Shirt, (C) 1 Pair of Heddoko Compression Pants, (D) 1 Battery Pack, (E) 9 Biomech Capsules, (F) 1 USB Wall Charger, (G) 1 USB Cable and (H) 1 Micro SD Card (Inside battery pack)

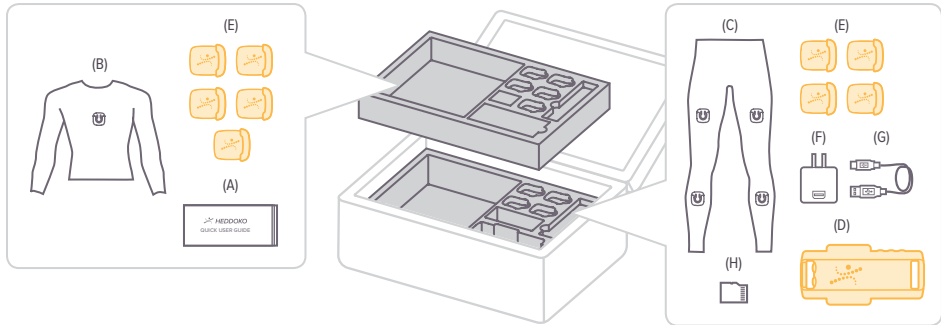


CHARGING YOUR SUIT




Attention: Before its first use, the suit needs to be charged. Please follow the charging instructions below. (After first use, the battery pack must be shut off before charging. Please refer to page 18).

The battery takes 5 hours to fully charge. Lay the suit out on a flat surface. Insert all capsules and plug the connector cables for the shirt and pants into the battery pack.

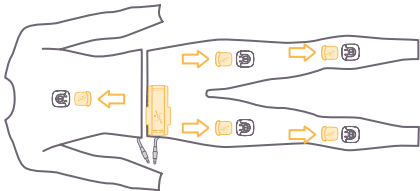

Plug the charging cable into the USB port on the battery pack. Plug the other end into an electrical outlet.

A green light indicates the device is charging. Charging is complete when the light turns amber.

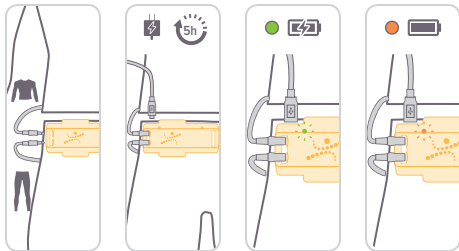

PUTTING ON YOUR COMPRESSION SHIRT







Attention: Follow these instructions to avoid damaging the suit.

Insert your arm into the sleeve. Pull the fabric up to your elbow. Do the same with your other arm.


Pass the shirt over your head and pull it down to your waist.

Make sure the compression zones are aligned with your elbows. **Do not pull directly on the baseplates.**

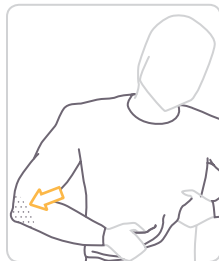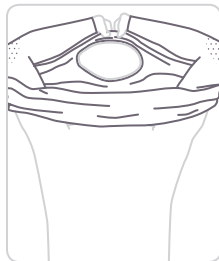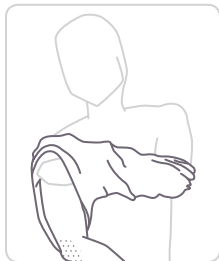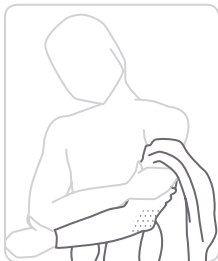


PUTTING ON YOUR COMPRESSION PANTS


Collect the fabric of one pant leg, opening the hole for your ankle.

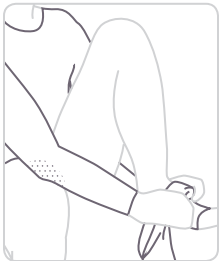

Insert feet through holes. Pull the fabric up to your knees. **Do not pull directly on the baseplates.**

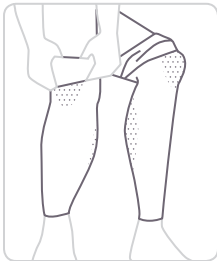

Make sure the compression zones are aligned with your knees and calves.

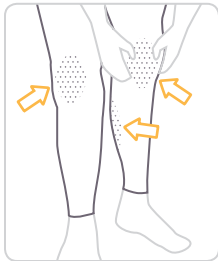

Once knee and calf zones are aligned, pull your pants up to your waist.



MOTION TRACKER: PLACEMENT OVERVIEW




The diagram shows two views of a person wearing a motion tracking suit. The front view on the left shows capsules on the chest, waist, and knees. The back view on the right shows capsules on the upper back, lower back, and legs. A circular inset on the left shows a close-up of a capsule, and a circular inset on the right shows a close-up of the battery pack.

BIOMECH CAPSULES
See insertion
instructions on Page 9


BATTERY PACK
See connection
instructions on Page 10

INSERTING YOUR BIOMECH CAPSULES


Each capsule has a unique identification number that corresponds with its placement on the suit.

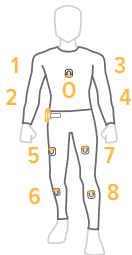

Look at the number on each capsule, and match it to its corresponding baseplate.

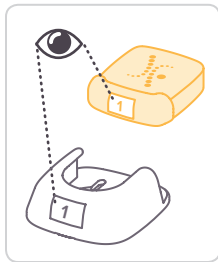

With the logo facing outwards, slide the tapered end of the capsule into the baseplate.

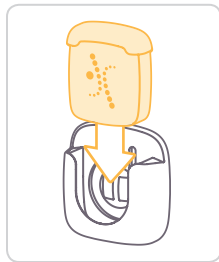


Listen for the “snap” to make sure the capsule is properly inserted.




ATTACHING THE BATTERY PACK

The battery pack sits on your right hip, with the logo right-side up and facing outwards.

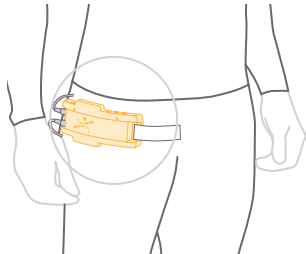


FRONT VIEW OF BATTERY PACK


Take the Velcro strap attached to the front of your pants and feed it through the hole in the battery pack.

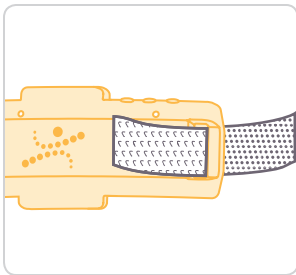

Pull on the strap, fold it over, and secure the Velcro in place.

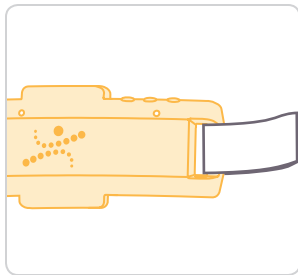


The connectors for the pants and shirt need to be plugged in to the rear of the battery pack.

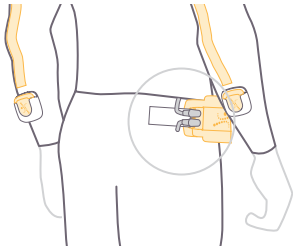


REAR VIEW OF BATTERY PACK

Take the Velcro strap at the back of your pants and feed it through the hole in the battery pack.

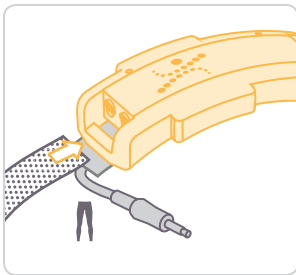


Pull on the strap, fold it over, and secure the Velcro in place.

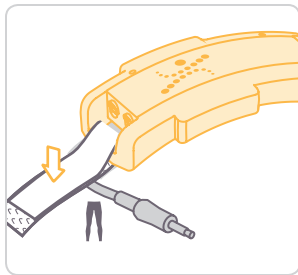


TURNING ON & CONNECTING THE BATTERY PACK


On the side of the battery pack, there is a small switch between the two jacks. Slide this switch downwards to turn the battery pack on.

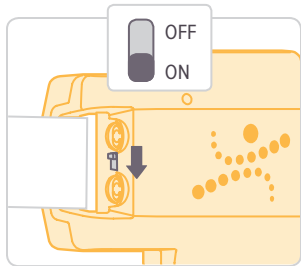


Insert the connector for the pants - take the tip of the jack and insert it into the lower plug.

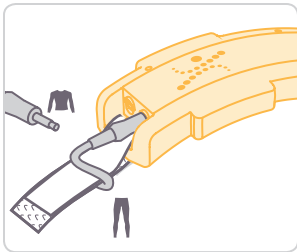

Insert the connector for the shirt - take the tip of the jack and insert it into the upper plug.

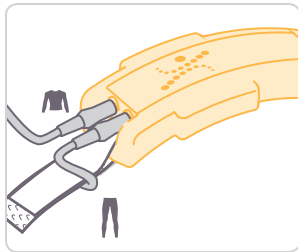


Once on, a flashing blue light indicates the battery pack is initializing. When the light changes to a solid green, the battery pack is in its “Ready” state.

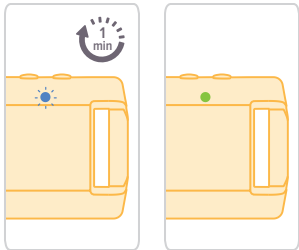


TROUBLESHOOTING: CONNECTING

If the light blinks yellow, the battery pack is in an “Error” state. Reset the battery pack by pressing the RESET button.

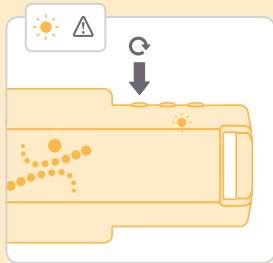

If this state persists, check to see if the SD-card is inserted properly. If the problem persists, please contact support@heddoko.com.

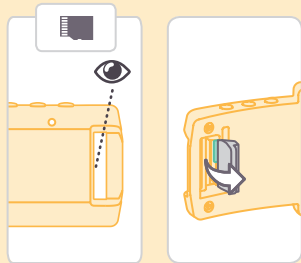

BATTERY PACK FEATURES



Switch



Insert



Press



LED



Blinking



On/Off



Stand by



Reset



Record



Initializing



Error



Micro SD Card



USB Cable



Fully charged



Charging




Low Battery



Shirt Connector



Pants Connector

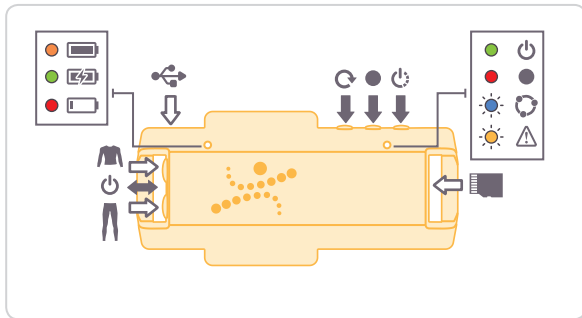


USAGE OVERVIEW




1 RECORD

Press the “Record” button. A red light will begin to flash.

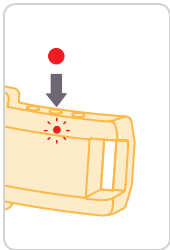

When it becomes solid red, the suit is in recording mode.


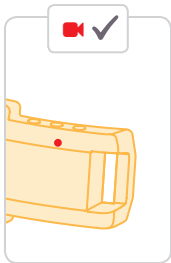


2 SUIT CALIBRATION

Stand in a “T-Pose”. Keep your knees straight and your feet together with toes pointing forwards. Raise your arms to your sides with your elbows completely extended and palms facing the ground. Aim to be as symmetrical as possible. Hold this pose for 10 seconds.



Attention:
You must strike a T-Pose at the beginning of each new recording.

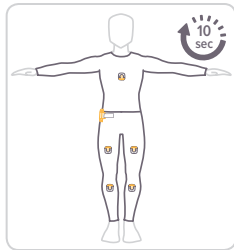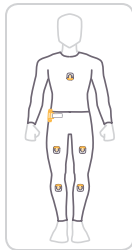


3 MOVE

After calibration, all of your movements will be tracked.



4 STOP



To stop recording, press RECORD again. The red light will turn green.

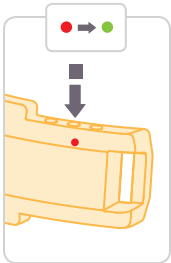

TROUBLESHOOTING: SLEEP MODE

After 5 minutes of inactivity the battery pack goes into a SLEEP state and the light will turn off. To wake it up, press and hold

the STANDBY button. When the battery pack has reached its "Ready" state, the light will turn a solid green.

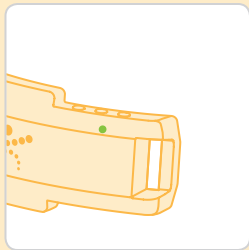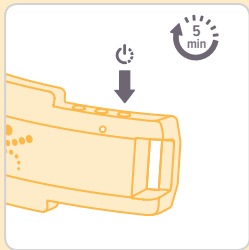


SHUT-OFF




AT THE END OF EACH USAGE, PLEASE FOLLOW THIS SHUT-OFF PROCEDURE.

NOTE: THE BATTERY PACK MUST BE SWITCHED OFF COMPLETELY IN ORDER TO PROPERLY CHARGE.


Unplug the shirt and pants connectors.

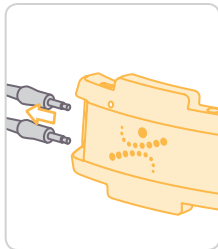

Press and hold the **STANDBY** button on the top of the battery pack until the light turns off.

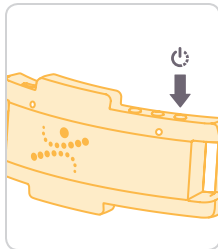


Slide the **POWER** switch upwards into the **OFF** position.


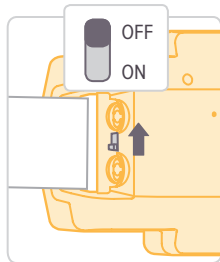


TROUBLESHOOTING: SHUT-OFF

If the POWER switch is turned off prior to the STANDBY button being turned off, simply slide the POWER switch downwards to turn the battery pack back on.

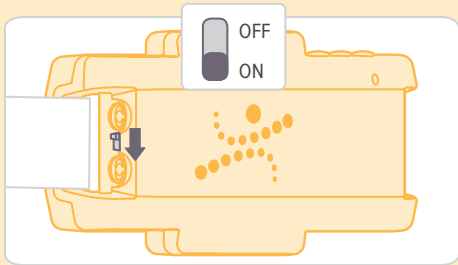

Press and hold the STANDBY button on the top of the battery pack until the light turns off. Next, slide the POWER switch upwards into the OFF position.

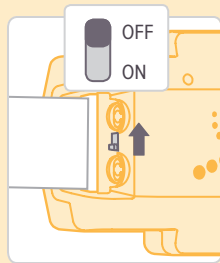
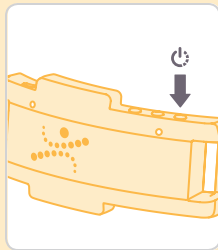


REMOVING THE SD CARD



NOTE:
ONLY USE THIS SD
CARD WITH THIS
SUIT.

Access the SD card through
the side door and take it
out of the slot.

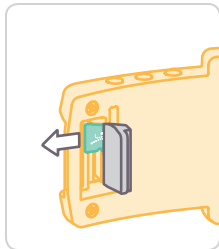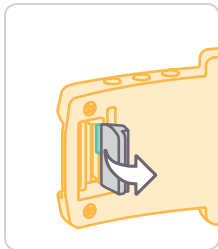

20 WEARING THE SUIT

LAUNCHING THE APP

For information on how to launch the Heddoko
application please refer to the corresponding readme file.



REMOVING YOUR SUIT



Remove all capsules and the battery pack.




Cross your arms and grab the bottom of your shirt.

Please follow these instructions to avoid damaging the suit.

Pull the shirt up and pass it over your head. **DO NOT PULL ON THE NECKLINE.**

Remove your arms from the sleeves. **DO NOT PULL DIRECTLY ON THE BASEPLATES.**


Pull your pants down to your knees and remove them from each leg.

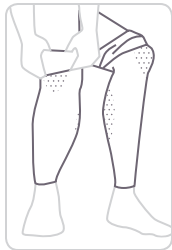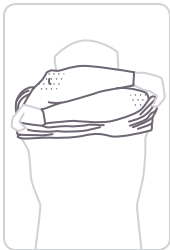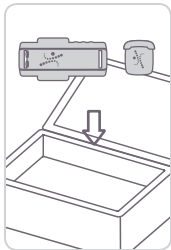


CARE & WASHING INSTRUCTIONS

Please follow these instructions to help you get the most out of your suit.


When suit is not in use, ensure Velcro straps are folded closed.

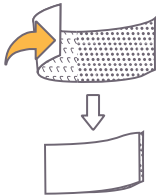

Do not twist or wring garment excessively.

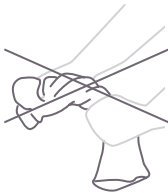


Do not wash the capsules or battery pack.

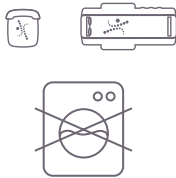




Hand wash. Do not use fabric softener or bleach. Air dry.


The capsules and battery pack can be wiped clean with a damp cloth.

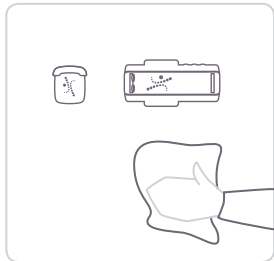

ATTENTION: DO NOT WASH IN WASHING MACHINE

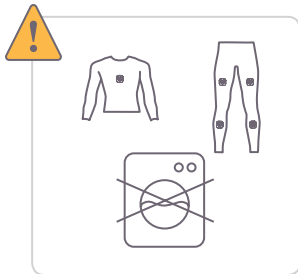

ATTENTION: DO NOT PUT SUIT IN DRYER.

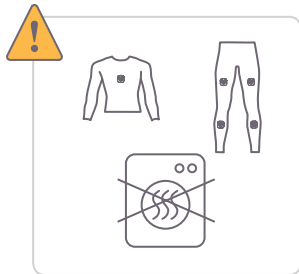

GET MOVING.



Thanks for reading this guide.

For any technical issues, please contact support@heddoko.com.

© Heddoko 2016. All rights reserved. Every effort has been made to ensure that the information in this manual is accurate. Heddoko is not responsible for printing or clerical errors.